




User Module

# Modem Bonding

APPLICATION NOTE

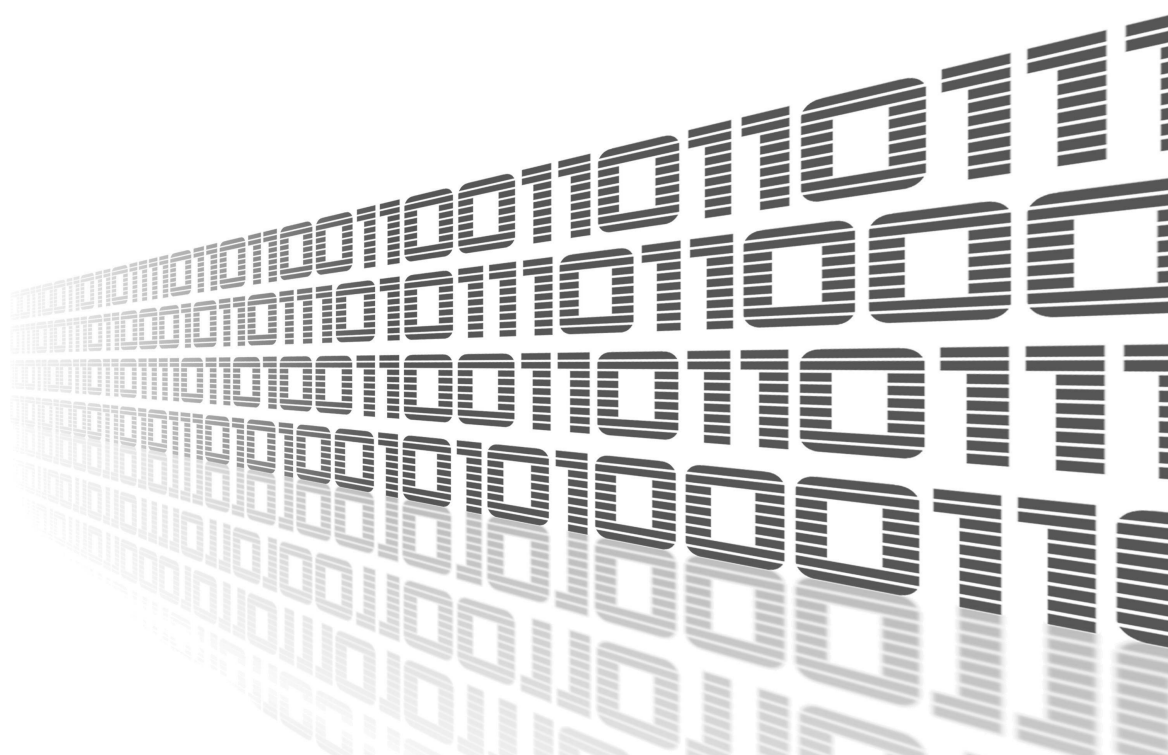

## Used symbols



*Danger* – Information regarding user safety or potential damage to the router.



*Attention* – Problems that may arise in specific situations.



*Information or notice* – Useful tips or information of special interest.



*Example* – example of function, command or script.



Advantech Czech s.r.o., Sokolska 71, 562 04 Usti nad Orlici, Czech Republic  
Document No. APP-0042-EN, revised on June 18, 2020. Released in the Czech Republic.

# Contents

<b>1</b>	<b>Description of user module</b>	<b>1</b>
<b>2</b>	<b>Configuration</b>	<b>2</b>
2.1	Configuration of the master router . . . . .	3
2.2	Configuration of the slave router . . . . .	4
<b>3</b>	<b>Testing</b>	<b>5</b>
<b>4</b>	<b>Troubleshooting</b>	<b>7</b>
<b>5</b>	<b>Related Documents</b>	<b>8</b>

## List of Figures

1	Wiring diagram . . . . .	1
2	Configuration form . . . . .	2
3	Network . . . . .	5
4	Monitoring . . . . .	6

## List of Tables

1	Description of items in configuration form . . . . .	2
---	--	---

# 1. Description of user module



User module Modem Bonding is not contained in the standard router firmware. Uploading of this user module is described in the Configuration manual (see [1]). User module is compatible with Advantech v2 routers, it is not compatible with v3 routers.

This user module allows you to induce a communication model between several Advantech routers (max. 20) in which the bonded connectivity of all routers in the chain is available on one router (master). The first device (router) in the chain has the role of master and bonded connectivity is available on its ETH port. Following routers are slaves. Master and slaves are wired together from PORT1 to ETH, so that the last Slave has only ETH connected.

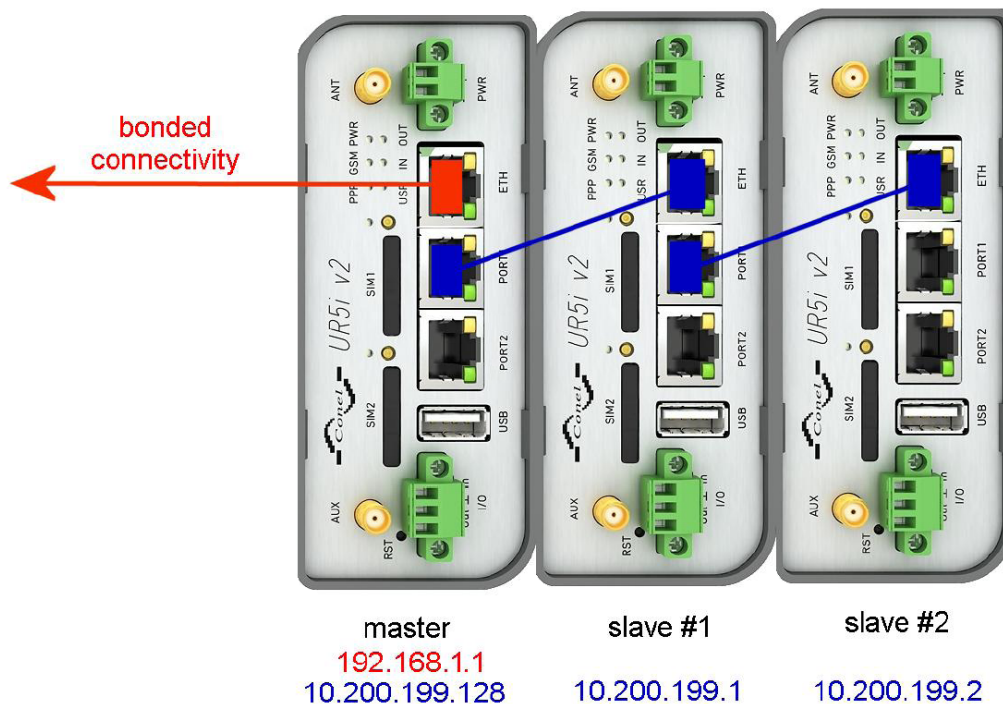


Figure 1: Wiring diagram

For configuration of each router is available web interface of user module, which is invoked by clicking on the module name on the *User modules* page of the router web interface. The left part of the Modem Bonding web interface contains the menu with pages for monitoring (*Status*), *Configuration* and *Customization* of the router. Customization block contains only the *Return* item, which switches this web interface to the interface of the router.

## 2. Configuration

Configuration of all routers (master and slaves) is performed via the form on the *Settings* in the *Configuration* part of the user module web interface. The first item in this form – *Enable modem bonding* – is used to activate the Modem Bonding user module. Other items have the following meanings:

Item	Description
Mode	Defines which role in modem bonding router has – master or slave
Slave ID	Unique number of a particular slave between all slaves. It is grayed out for master.
Slaves	Specifies the number of slave routers that are part of the chain
Info Server IP	IP address of bonding server. <b>(Don't use DNS name!)</b> .
Username	Username for authentication
Password	Password for authentication
Interfaces	The communication interface (used only for UCR11 v2 routers)

Table 1: Description of items in configuration form



The last device in the chain can be connected a different router than the router of Advantech company. Then it is necessary to check the *Modem without Bonding feature is connected at the end of chain...* box and set IP address 10.200.199.100 for this router.

### Modem Bonding Configuration

☐ Enable modem bonding

Mode

Master

Slave ID

1

1..20

Slaves

5

Info Server IP

Username

Password

Interfaces

☒ ppp0
 ☐ usb0

☐ Modem without Bonding feature is connected at the end of chain. Modem must have IP address 10.200.199.100

Figure 2: Configuration form

## 2.1 Configuration of the master router

Configure the master router as usually for connecting to your mobile network (APN, username, password, ...). The LAN settings are also on your decision (DHCP, IP range). Do not enable or configure *Secondary LAN* in the web interface of the router (*LAN* item). If the master is working (internet connectivity is OK on computer behind it), it is possible to configure the Modem Bonding module.

1. Check the *Enable modem bonding* box.
2. The *Mode* item set to *Master*.
3. *Slave ID* is grayed out, because you are configuring master.
4. Enter the number of slaves which are part of the chain to the *Slaves* textbox. If you have e.g. four modems in total, ( $1 \times \text{master} + 3 \times \text{slave}$ ), write number 3.
5. The *Info Server IP* item will contain the IP address of the bonding server.
6. Enter authentication information of the router to the *Username* and *Password* items.

When the master router starts modem bonding, it redirects default route to the newly created bonding tunnel. Also DNS servers of your mobile operator are replaced with Google ones (8.8.8.8 and 8.8.4.4) which are accessible from the internet. When the PPP connection is for some reasons dropped and then restored, all these changes are replaced by a fresh start of PPP. You have to create a script to revert these changes. Enter the following lines to the *Up Script* field on the *Up/Down script* page of the router web interface and confirm with *Apply*.

```
#!/bin/sh
#
# This script will be executed when PPP/WAN connection is established.

route del default
route add default debond0
echo "nameserver 8.8.8.8" > /etc/resolv.conf
echo "nameserver 8.8.4.4" >> /etc/resolv.conf
```

## 2.2 Configuration of the slave router

Configure the slave as usually for connecting to your mobile network (APN, username, password, ...). The LAN settings is also on your decision (DHCP, IP range), but keeping the default settings (192.168.1.1 and DHCP) is recommended. Do not enable or configure *Secondary LAN* in the web interface of the router (*LAN* item). If the slave is working (internet connectivity is OK on computer behind it), it is possible to configure the Modem Bonding module.

1. Check the *Enable modem bonding* box.
2. The *Mode* item set to *Slave*.
3. Enter a unique identifier of the slave router to the *Slave ID* textbox – number in the range from one to twenty
4. The remaining items are grayed out

Each slave obtains a new IP address 10.200.199.X (where X is its *Slave ID*) for both Ethernet ports (bridged), when modem bonding is active, but the old IP address (typically 192.168.1.1) is still available on ETH port (you can use it for later changes in webadmin).



### 3. Testing

You can see a new interface *debond0* on the *Network* page in the *Interfaces* section of the router web interface. Default route in the *Route Table* section will be pointed to this interface. On the *System Log* page will be displayed lines starting with *loadbalance*.

Interfaces							
debond0	Link encap:UNSPEC HWaddr 00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00 inet addr:10.6.0.2 P-t-P:10.6.0.1 Mask:255.255.255.255 UP POINTOPOINT RUNNING MTU:1464 Metric:1 RX packets:5789 errors:0 dropped:0 overruns:0 frame:0 TX packets:6732 errors:0 dropped:0 overruns:0 carrier:0 collisions:0 txqueuelen:500 RX bytes:2479819 (2.3 MB) TX bytes:1315106 (1.2 MB)						
eth0	Link encap:Ethernet HWaddr 00:0A:14:81:25:3B inet addr:192.168.1.1 Bcast:192.168.1.255 Mask:255.255.255.0 UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1 RX packets:92796 errors:0 dropped:0 overruns:0 frame:0 TX packets:102607 errors:0 dropped:0 overruns:0 carrier:0 collisions:0 txqueuelen:32 RX bytes:14462644 (13.7 MB) TX bytes:65022192 (62.0 MB) Interrupt:23						
eth1	Link encap:Ethernet HWaddr 00:0A:14:81:25:3C inet addr:10.200.199.128 Bcast:10.200.199.255 Mask:255.255.255.0 UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1 RX packets:63272 errors:0 dropped:0 overruns:0 frame:0 TX packets:58075 errors:0 dropped:0 overruns:0 carrier:0 collisions:0 txqueuelen:1000 RX bytes:55744358 (53.1 MB) TX bytes:7629530 (7.2 MB) Interrupt:1						
ppp0	Link encap:Point-Point Protocol inet addr:10.28.76.37 P-t-P:192.168.254.254 Mask:255.255.255.255 UP POINTOPOINT RUNNING NOARP MULTICAST MTU:1500 Metric:1 RX packets:10603 errors:0 dropped:0 overruns:0 frame:0 TX packets:10310 errors:0 dropped:0 overruns:0 carrier:0 collisions:0 txqueuelen:20 RX bytes:6444786 (6.1 MB) TX bytes:1857686 (1.7 MB)						
Route Table							
Destination	Gateway	Genmask	Flags	Metric	Ref	Use	Iface
10.6.0.1	0.0.0.0	255.255.255.255	UH	0	0	0	debond0
192.168.254.254	0.0.0.0	255.255.255.255	UH	0	0	0	ppp0
10.200.199.0	0.0.0.0	255.255.255.0	U	0	0	0	eth1
192.168.1.0	0.0.0.0	255.255.255.0	U	0	0	0	eth0
0.0.0.0	0.0.0.0	0.0.0.0	U	0	0	0	debond0

Figure 3: Network

In the web interface of this user module in the *Status* part is available *Monitoring* item, which allows you to monitor the state of created tunnel and obtain statistical data.



Figure 4: Monitoring

The rows in the figure above are representing channels (routers) in bond. Each channel has upstream (direction from local side to remote) and downstream (opposite direction).

The first channel in the figure above has paused upstream – yellow color (because of its low speed) and failed downstream – red color (packet loss). The second channel is up and running. The length of green bars represents the proportion of the participation of the channel bandwidth on bonded capacity.

## 4. Troubleshooting

– *The traffic is not routed through the bonding tunnel.*

- Check that bonding is enabled on the master (*Enable modem bonding* item).
- Check bonding server IP address, username and password on the master.
- Check that there is a new interface on the *Network* page in the *Interface* section of the router web interface
- Check that default route is set to this interface.
- Check that the bonding server IP address is reachable from the master (ping it).

– *DNS resolving is not working on computers connected to the master.*

- Check that *Up Script* of the master (*Up/Down script* page in router web interface) contains these lines:

```
echo "nameserver 8.8.8.8" > /etc/resolv.conf
echo "nameserver 8.8.4.4" >> /etc/resolv.conf
```

- Connect to the master via SSH and check, that */etc/resolv.conf* contains only the following lines (and nothing else). Use `cat /etc/resolv.conf` command.

```
nameserver 8.8.8.8
nameserver 8.8.4.4
```

- Check that DNS server on your computer connected to the master is set to IP address of Master (typically 192.168.1.1).

– *Speed of the bonded connection is lower than expected.*

- Check that all slaves are connected in the chain and all are connected to internet (WAN/PPP LED diode is blinking).
- When some slaves are much slower than others, they are not used in a bond, because they would slow down the overall traffic.
- Check that connectivity to your bonding server is fast enough for bonded capacity.
- Download some bigger file (greater than 1 MB) to let the weights of bonded lines to be counted correctly. Do not measure speed of the bond shortly after its creation!

## 5. Related Documents

[1] Advantech Czech: **v2 Routers Configuration Manual** (MAN-0021-EN)



Product related documents can be obtained on *Engineering Portal* at [www.ep.advantech-bb.cz](http://www.ep.advantech-bb.cz) address.